



SR30 & SR60 NEW CONTROL CARD



INSTALLATION GUIDE

For technical assistance call 1 800 361-1185





TABLE OF CONTENTS

	Page
1 - First step is to remove old control card	3
4. Be sure to identify the oil sensor wire before disconnecting	4
5. To disconnect the sensor wires, unscrew the screws using a small flat screwdriver	5
6. Remove the control card	5
7. Take the new control card already on it's aluminum plate and install it using the following instructions	55
10. Insert the cable according to their position and tighten with the screws	6
11. Re-connect the grey comm. wire and the red and black alarm wire. Take special care to properly align the wires when installing	16
12. Here is the card with all connections in place	7
13. Re-install the 4 screws using a no. 2 "Robertson" screwdriver	7
14 Re-connect the recycler to the electrical supply	8
15 . The last step is to program the recycler. Please refer to page 16 of the instruction manual (included)	8
Warranty information / Technical assistance	8





FIRST STEP IS TO REMOVE OLD CONTROL CARD


WARNING

Disconnect the recycler from the electrical supply before beginning the installation.

1. Using a "Robertson" no.2 screwdriver, unscrew the 4 screws on the aluminum plate.




2. Delicately remove the plate from the front of the machine.

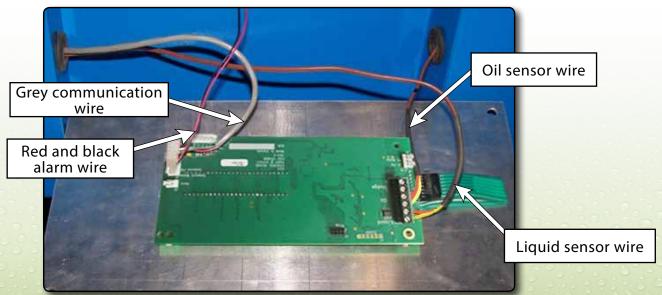






3. Disconnect the communication and alarm wires.

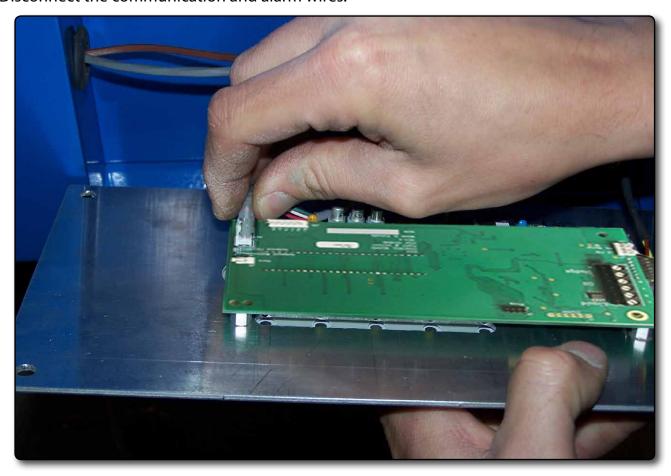


4. Be sure to identify the oil sensor wire before disconnecting.

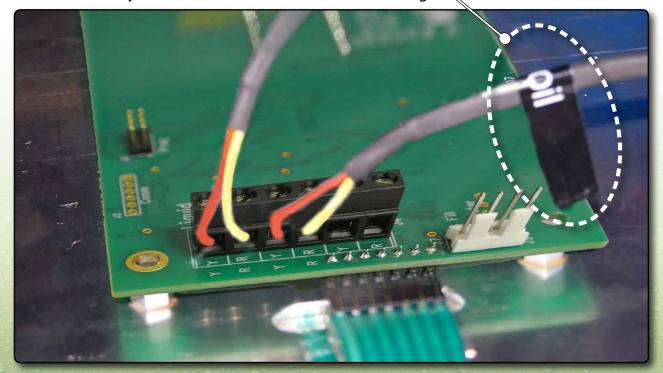






5. To disconnect the sensor wires, unscrew the screws using a small flat screwdriver.

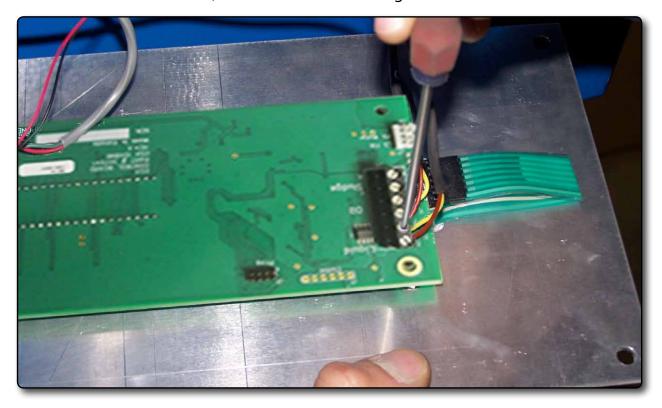


- 6. Remove the control card.
- 7. Take the new control card already on it's aluminum plate and install it using the following instructions.

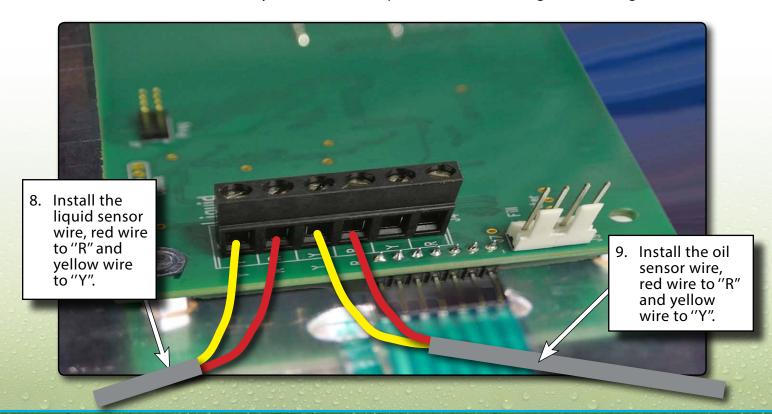





10. Insert the cable according to their position and tighten with the screws.

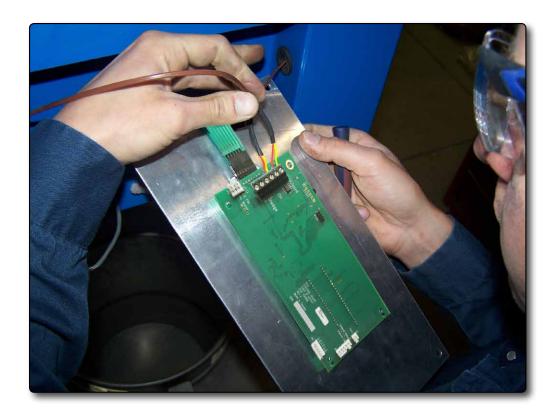


11. Re-connect the grey comm. wire and the red and black alarm wire. Take special care to properly align the wires when installing.







12. Here is the card with all connections in place.

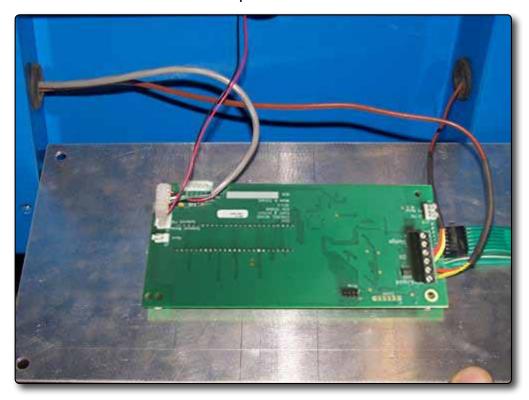

13. Re-install the 4 screws using a no. 2 "Robertson" screwdriver.







- 14. . Re-connect the recycler to the electrical supply.
- 15. The last step is to program the recycler. Please refer to page 16 of the instruction manual (included).

WARRANTY INFORMATION / TECHNICAL ASSISTANCE

The Warranty of your system begins with the Certified Start-up by your local ISTpure Distributor. Make sure this is completed and you receive a copy of the Certified Start-up document.





